

9. Switch to PN layer: Toggle(FN + Right SHIFT) => Right FN LED on
 - (1) Invoking programmed B: B => Output CTRL + C (Same as copy)
 - (2) Invoking programmed FN + A: FN+ A => Output 456(No need to press PN)
 - (3) Invoking programmed C: C=> Running CMD.EXE
 - (4) If you need to get the A back (Now pressing A is 123): PN + A => A

Restore to factory default

Press and hold FN + R, Toggle LED is flashing after 3 sec. Continue to hold FN + R until the Toggle LED flashes for 9 times will restore to factory default.

FN General keys				Remark	
FN	+	=	1	F1	Key code change
			2	F2	
			3	F3	
			4	F4	
			5	F5	
			6	F6	
			7	F7	
			8	F8	
			9	F9	
			0	F10	
			-	F11	
			= +	F12	
				INS	
			P	Print Screen	
			[{	Scroll Lock	
] }	Pause				
X	APP				
↑	Page Up				
↓	Page Down				
←	HOME				
→	END				

FN Multimedia keys				Remark	
FN	+	=	Y	Calculator	Key code change
			N	Volume Down	
			M	Volume Up	
			<	Mute	

FN LED Control keys				Remark	
FN	+	=	V	Backlit LED on (Except Left FN, Right FN and PN)	Press the 1 st time
				Backlit LED off	Press the 2 nd time
			C	Reduce LED brightness	Totally 7 level of brightness, backlight status and brightness will be saved after power down
			B	Increase LED brightness	

FN Programming Control keys				Remark	
FN	+	=	R	Restore to factory default	Need to hold for 12 sec
			Right SHIFT	Switch to program layer	Press the 1 st time (Right FN on)
			Right CTRL	Switch to visible layer	Press the 2 nd time (Right FN LED off)
				Enter Programming Mode	Press the 1 st time (PN LED flashing)
				Exit Programming Mode	Press the 2 nd time (PN LED off)
			F	Delay 15ms	Only valid in Programming Mode
			G	Delay 0.1s	
H	Delay 0.5s				

FN Special keys				Remark	
FN	+	=	Z	SHIFT key is down even when the SHIFT key is released. Press the SHIFT key again will make the SHIFT key up	Press the 1 st time (Left FN LED on)
				SHIFT key returns to normal	Press the 2 nd time (Left FN LED off)

DIP Switch				Remark
	ON	OFF		
SW 1	CAP = Left FN CAP LED = Left FN LED Left FN = CAP Left FN LED = CAP LED	CAP = CAP CAP LED = CAP LED Left FN = Left FN Left FN LED = Left FN LED		Default = OFF
SW 2	Right CTRL = ~	Right CTRL = Right CTRL		Default = OFF
SW 3	N/A	N/A		Default = OFF
SW 4	Write protect, try to press FN+R to program a key will cause PN LED flashing quickly for one sec and then returns to normal			Default = OFF